



Cotton Candy Machine

Please read these instructions carefully before use

Operation:

- Using a damp cloth, moisten the inside floss pan. This will help the floss adhere to the pan
- Add floss only while the motor is off
- Manually spin the head to balance
- Fill the sugar to about 90% full make sure that you do not overfill
- Pick up the cone, holding it an inch or two at the pointed end between your two fingers and thumb
- With a light flicking action, break the web of floss that is building up in the pan
- A small amount of floss should stick to the cone. If not, brush the cone over a damp sponge
- Lift the cone with the ring of floss attached, by rotating the cone, wind the floss onto it. Do not roll floss on the cone inside the floss pan, roll it on the outside of the pan only
- When stopping operation for the day or any prolonged period, it is a good idea to run all of the sugar out of the floss head
- When empty, turn the heat to the highest setting for approximately one minute to remove the carbon from the ribbons

CAUTION:

NEVER ALLOW WATER TO ENTER THE FLOSS HEAD

PLEASE KEEP HANDS AWAY FROM THE SPINNER HEAD

PLEASE CALL THE OFFICE IF YOU HAVE ANY QUESTIONS:

Fairfield: (203)-368-6111 Redding: (203)-587-1333