



## **POPCORN MACHINE OPERATING INSTRUCTIONS:**

**\*Please Note:** DO NOT COVER THE AIR VENT HOLES: The motor air intake and exhaust holes at top of machine must remain clear of any obstructions.

**\*Please Note:** AVOID BURNS: DO NOT TOUCH KETTLE WHILE HOT!

### **Switches:**

Kettle Motor Switch: Turns on the motor that drives the kettle agitator shaft.

Kettle Heat Switch: Turns on the heat element inside the kettle.

### **Pop!**

1. Turn on the kettle heat and kettle motor switch.
2. \*Test pop a kettle of corn first: Place oil in kettle with (3) kernels- when kernels pop place the remainder of oil, measured corn and flavoring into kettle and close lid and door.
3. When the corn has popped empty the kettle **immediately** and return the kettle to the upright position.
4. \*A normal popping cycle will take about two minutes and thirty-five seconds to three minutes and fifteen seconds. \*
5. Repeat the cycle- loading kernel and oil pouch **immediately**. Always pop 3-5 batches for best results. Subsequent batches are always more flavorful than the initial batch.
6. **Failure to empty the kettle immediately and reload immediately will cause strain on the thermostat and burn bottom of kettle.**
7. When popping the last batch, turn off the kettle heat switch about midway through cycle.
8. Corn will continue to pop rapidly as there is plenty of heat left in the kettle.
9. When finished, make sure all switches are turned off.
10. Let the machine cool completely before moving.

**ENJOY!**