



## **SnoCone Operating Instructions:**

Machine is 120V, 7amp.

Requires Electricity

This machine should be placed on a sturdy tabletop with access to electricity. Drainage hose provided to prevent leaking on tabletop.

- Start the motor and fill the neck an inch from the top with ice cubes.
- Push ice down with the metal handle towards the cutter blade with firm pressure.
- DO NOT force the handle or put your hand inside the neck with blade on.
- Larger ice pieces with firm pressure creates the best snow

Put only ice in the neck to prevent damage to the blades.

A surface temperature of 1500F is normal.

How much ice will I need:	Most sno-cones are 4-6oz.
How much does a 20lb bag produce?	About 40-50 Sno-Cones
Can I use block ice?	Yes, but you must break it into 3-4" pieces to fit down the neck.
How much syrup should I use?	One 6oz cone will typically take 2oz of syrup