



Tent Heater Instructions

1. Make sure heater is plugged into an electric power source.
2. Turn on propane tank – counter clockwise
3. Turn on thermostat located inside the tent to the desired temperature
 - The heater should blow cool air for a few seconds and then fire up
4. At end of event, turn off thermostat and propane tank.

Note: Keep heat off or on low when setting up, propane quantities are supplied based on event duration unless other arrangements have been made.

If you continue to have issues – please call the office at 203-368-6111.